

INSTALLATION INSTRUCTIONS (v1.0 08/2008)

Harman Motive Upper Intercooler Pipe
Mitsubishi Lancer Evolution X
 PN: HM-EVOX-UICP



QTY	ITEM	Note
1	UICP Tube # 1 (w/ bracket and 90deg bend)	From intercooler to pipe #2
1	UICP Tube # 2 (two bends)	From turbo to pipe #1
1	2.5" to 1.75" Silicone Reducer	From pipe #2 to turbo outlet
1	2.5" Hump Hose	From Pipe #1 to pipe #2
1	2.5" Straight Hose	From intercooler to tube #1
5	2 5/16 – 3 1/4" Hose Clamps	For BOV vacuum connection
1	9/16 to 2.5" Hose Clamp	For valve cover to intake connection


Thank you for purchasing the Harman Motive Upper Intercooler Pipe for the Mitsubishi Lancer Evo X. We know you'll appreciate the quality and performance of this Harman Motive product.

These instructions are intended as a guide to properly install your product. Please take care and take your time.

Should you have any questions or comments, please don't hesitate to contact us. We sincerely appreciate your business and support.

WARNINGS AND NOTES

1. Make sure ignition is turned off (dash off). For extra protection, you may disconnect the battery (in the trunk).
2. Make sure all hose clamps are positioned after the bead on the intercooler piping. Failure to do so will result in boost leaks or hoses popping off.

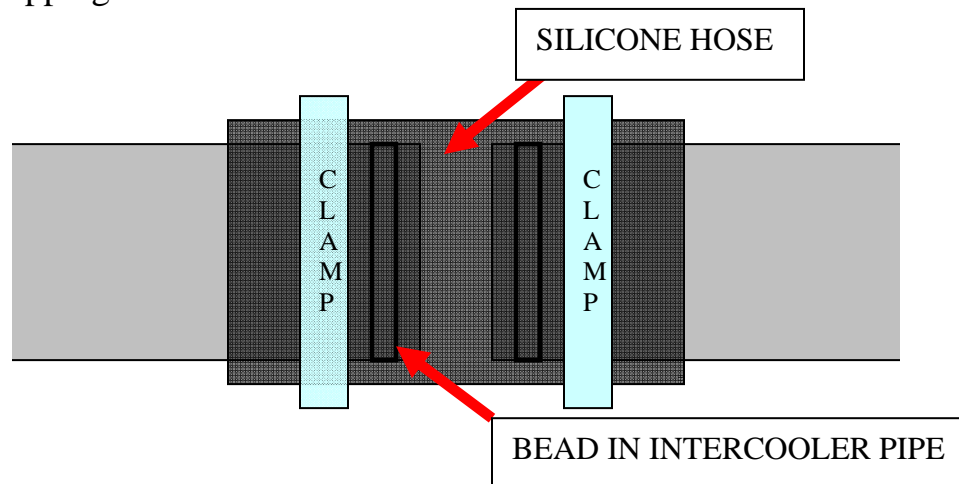

3. Do not over tighten hose clamps. If you notice distortion of the clamp or tearing of the silicone hose, you've gone too tight!
4. After you've taken your car for a test drive, check all hose clamps again to make sure they are tight and correctly positioned.


TOOLS REQUIRED

- | | |
|-----------------------------|----------------|
| 1. Flathead Screwdriver | 4. 8mm Socket |
| 2. Philips head Screwdriver | 5. 10mm Socket |
| 3. Ratchet | 6. 12mm Socket |

INSTALLATION INSTRUCTIONS

INSTRUCTIONS

1. REMOVE RADATOR SHROUD AND AIR INLET

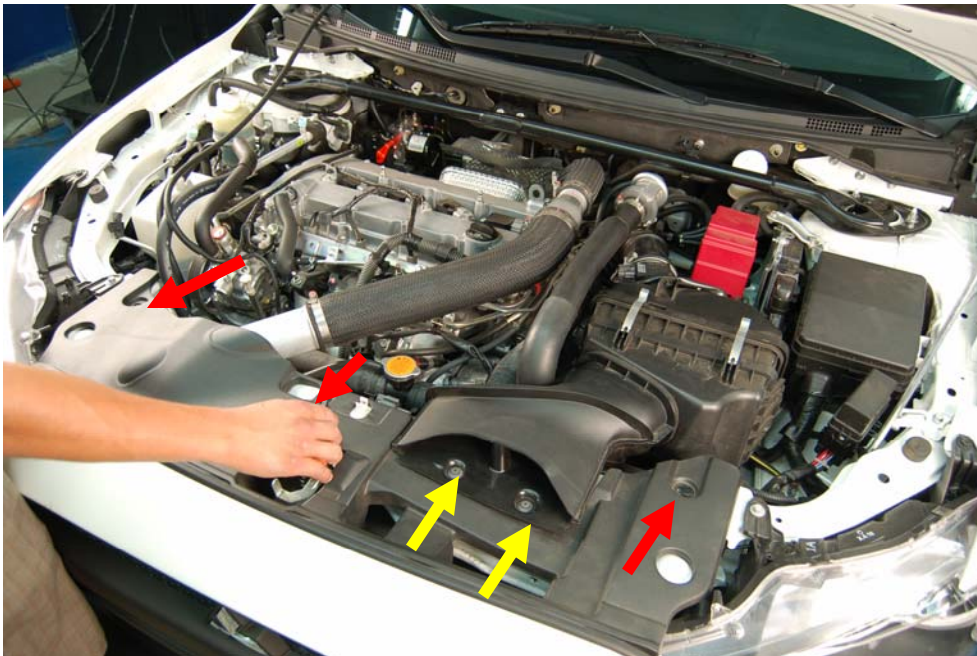

- Remove air inlet scoop by unscrewing Phillips head body clips and gently pulling scoop from airbox.
- Remove radiator shroud by removing plastic clips with flathead screwdriver. Use care not to break the clips. Once the tab is popped out ½ way, you can remove the both pieces at once by hand. Once all plastic clips are removed, pull the radiator shroud up toward you until it pops out of place. Make sure all clips are removed before pulling too hard.

2. REMOVE 12MM BOLTS SECURING UICP TO RADIATOR SUPPORT




3. LOOSEN HOSE CLAMPS AND REMOVE INTERCOOLER PIPE




NOTE: ACCESSING LOWER HOSE CLAMP THROUGH GRILL W/ 10MM SOCKET

4. REMOVE FACTORY INTERCOOLER PIPE BUSHINGS AND INSTALL TO HARMAN INTERCOOLER PIPE

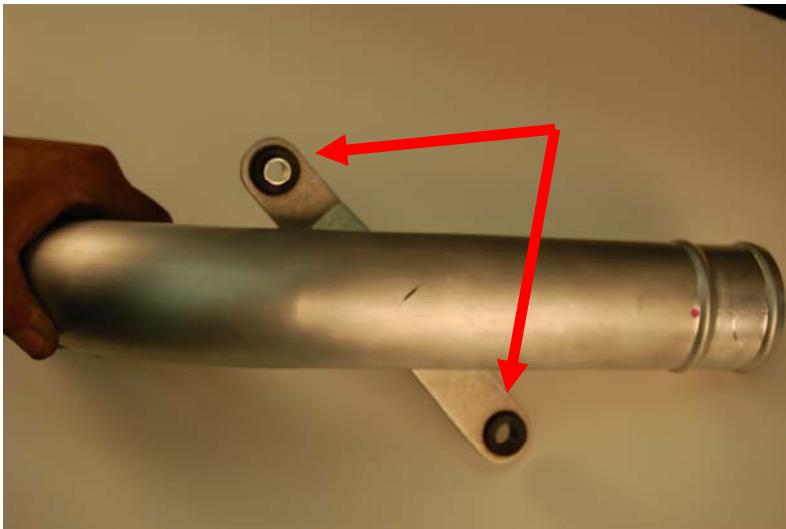

5. INSTALL HARMAN MOTIVE INTERCOOLER PIPE

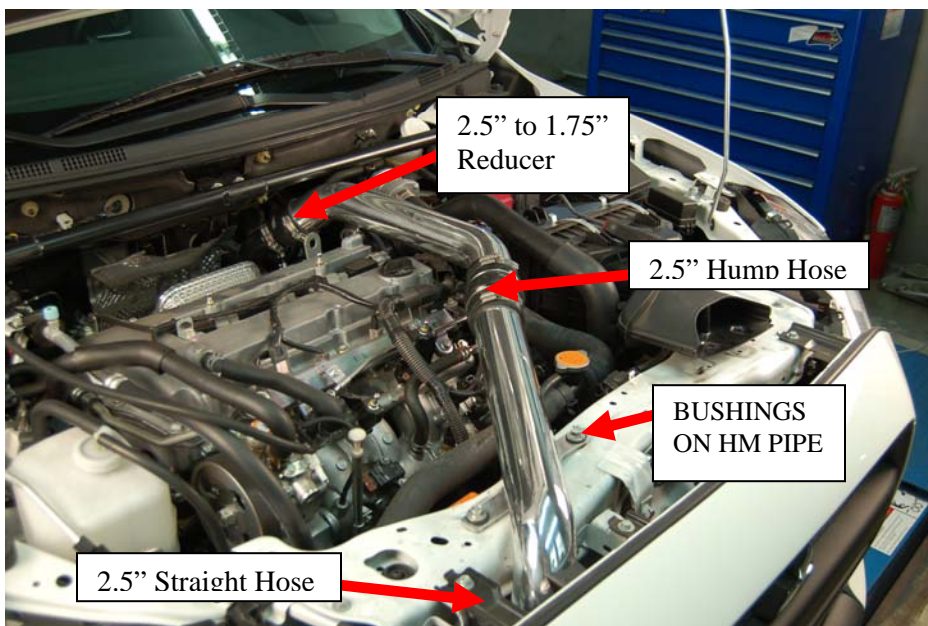

6. REINSTALL RADIATOR SHROUD AND AIR INLET SCOOP

START THE CAR AND LISTEN FOR ANY LEAKS. TAKE THE CAR ON A TEST DRIVE THEN RECHECK ALL HOSE CLAMPS.

IF YOU HAVE ANY QUESTIONS OR PROBLEMS PLEASE CONTACT US!